

CVR / Bus Fault / Cargo Temp Controls

| | | |
|--|--|--|
| <p>GEN BUS FAULT RESET</p> <p>Maintenance use only Not to be used by Flight Crew</p> <p>BUS _ FAULT (illuminated) -Switch is used to reset the associated Generator Control Unit</p> | | <p>COCKPIT VOICE RECORDER TEST / ERASE Buttons</p> <p>TEST (Pressed) Minimum of level 8 during test</p> <p>ERASE (Pressed) Can only be accomplished on ground with parking brake set</p> |
| <p>FWD CARGO TEMP Control</p> <p>Controls temperature in lower FWD cargo compartment by regulating system 3 pneumatic flow to jet pumps.</p> <p>LO to HI Selection options are either 40° or 70°</p> <p>OFF Heating system is off</p> | | <p>AFT CARGO TEMP Control</p> <p>Controls temperature in lower AFT cargo compartment by regulating system 2 pneumatic flow to jet pumps.</p> <p>Cold to hot Selection range is from 39.5° to 95.5°</p> <p>OFF Heating system is off</p> |